


Connection of the hull with screws


apply Vaseline to the screw thread
Screw M3x10 mm or M3x12 mm

1.

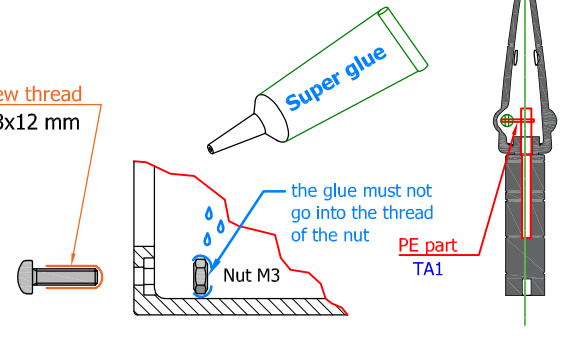

2.

pull the nut in and remove the screw

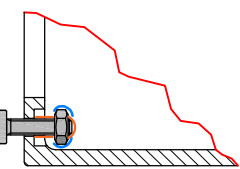

3.

