INSTRUCTIONS PHOTO ETCHED DETAILS FOR BORDER BS-001 TYPE: VIIC U-552, U-96, U-82 1/35

SKU-081-U-552 SKU-083-U-96 SKU-087-U-82 U-201

Very early on, the side hull collar was the first to be removed because it increased the submersible time. The Border kit submarine never existed in this design. The side collar of the submarines was also shaped differently and pointed upwards (not flush with the deck).

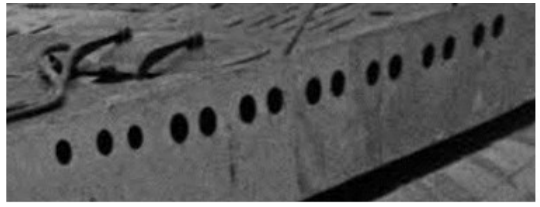

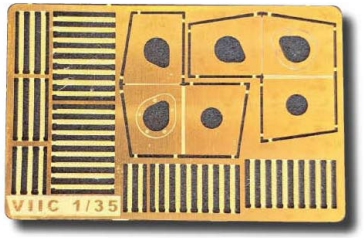

SKU-081-U-552

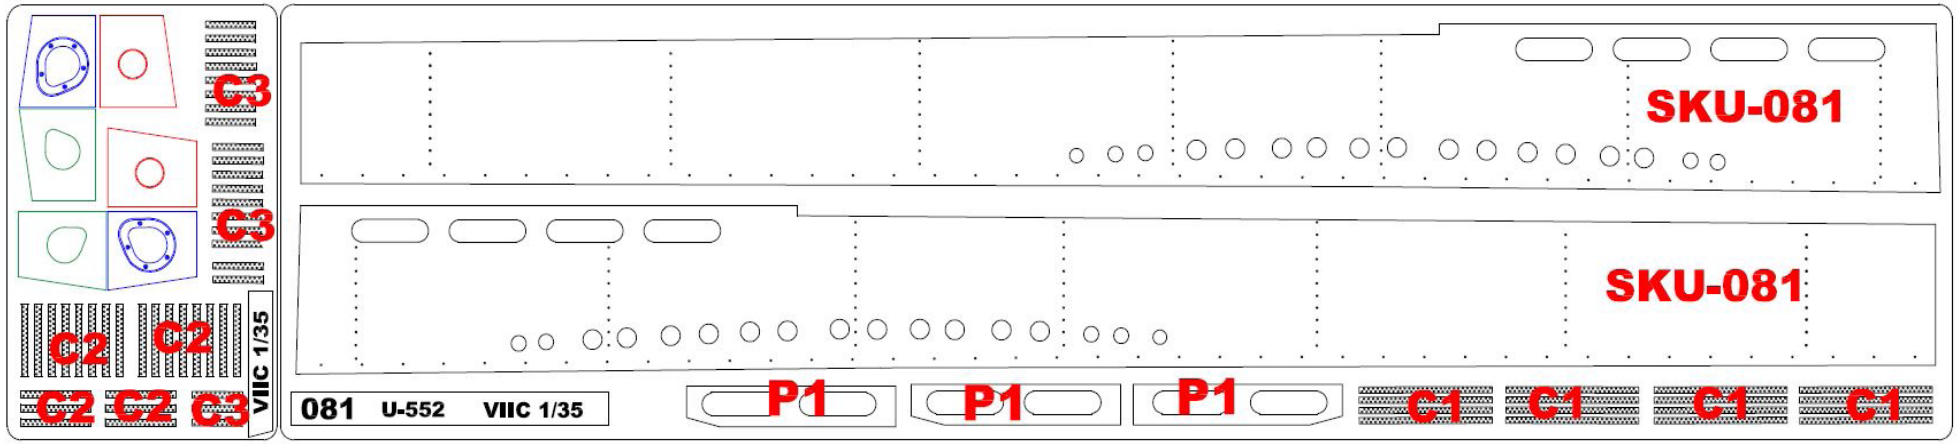

SKU-083-U-96

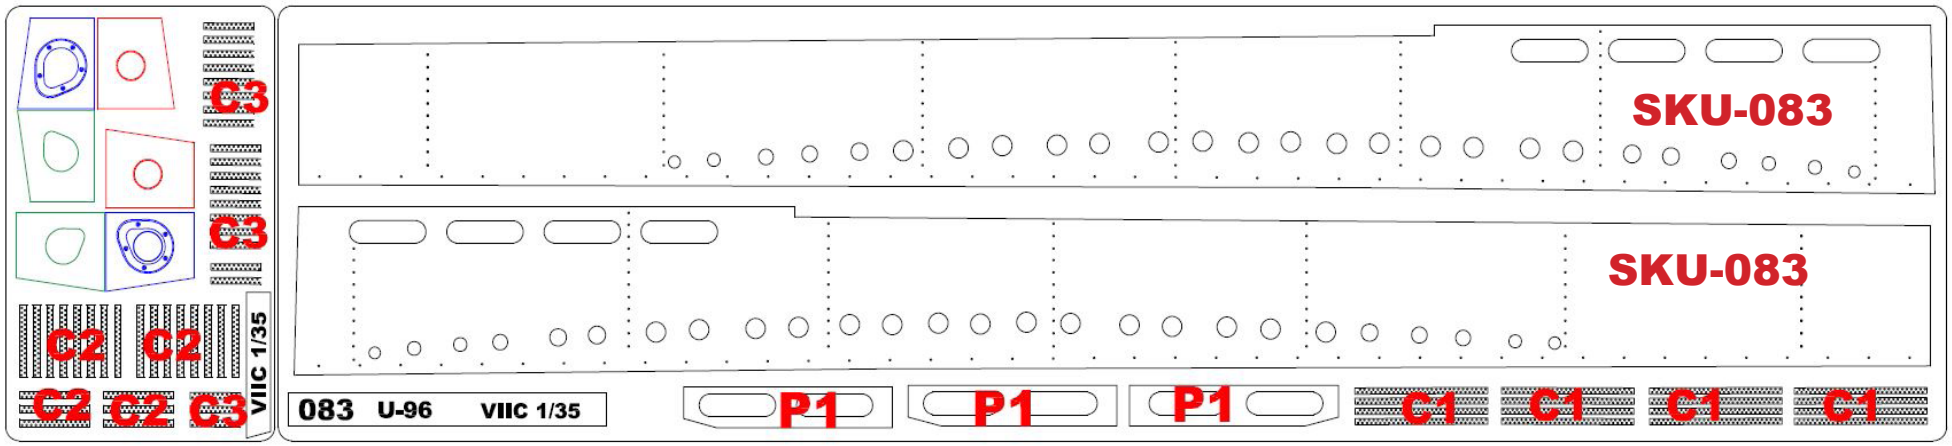

SKU-087-U-82
(U-201)

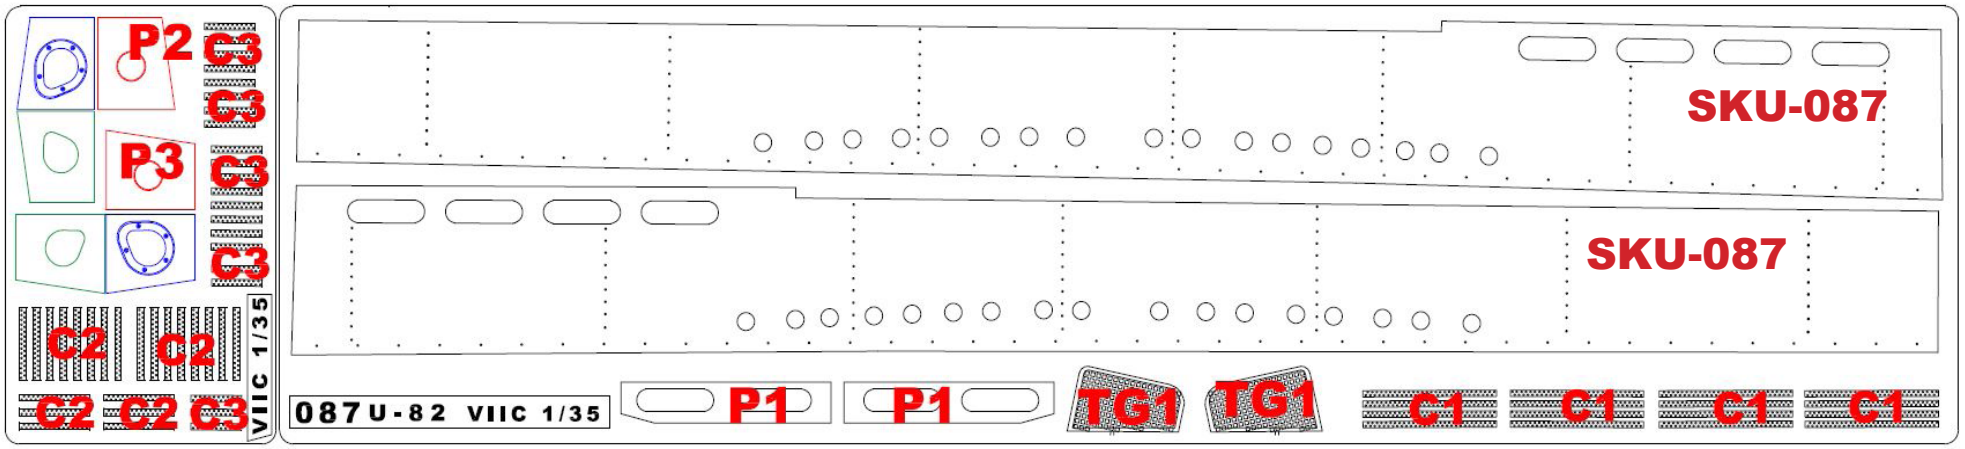

SKU-DH-Early

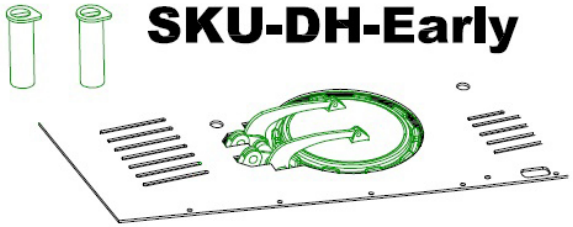

In this turret design, the side collars must be removed and replaced with a PE set, as the collars were removed from submarines very early on. They slowed down the dive speed.

SKU-L-552
REPAIR COLLAR

U-552

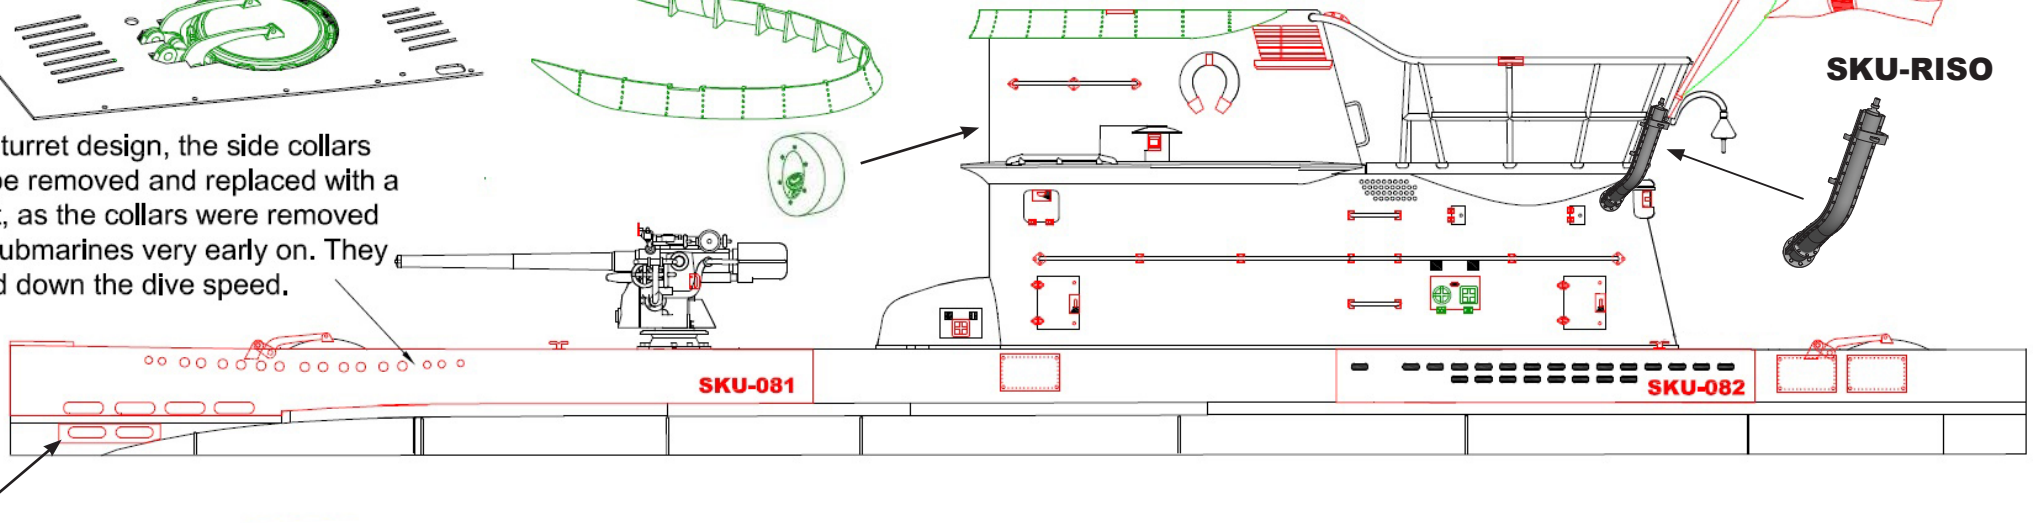

SKU-DH-Late

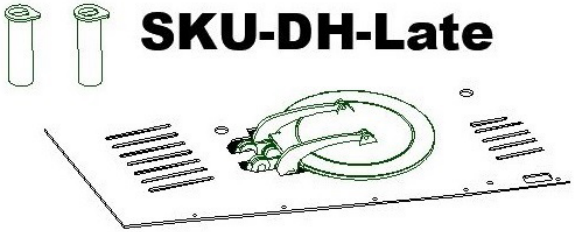

In this turret design, the side collars must be removed and replaced with a PE set, as the collars were removed from submarines very early on. They slowed down the dive speed.

SKU-L-96
REPAIR COLLAR

U-96

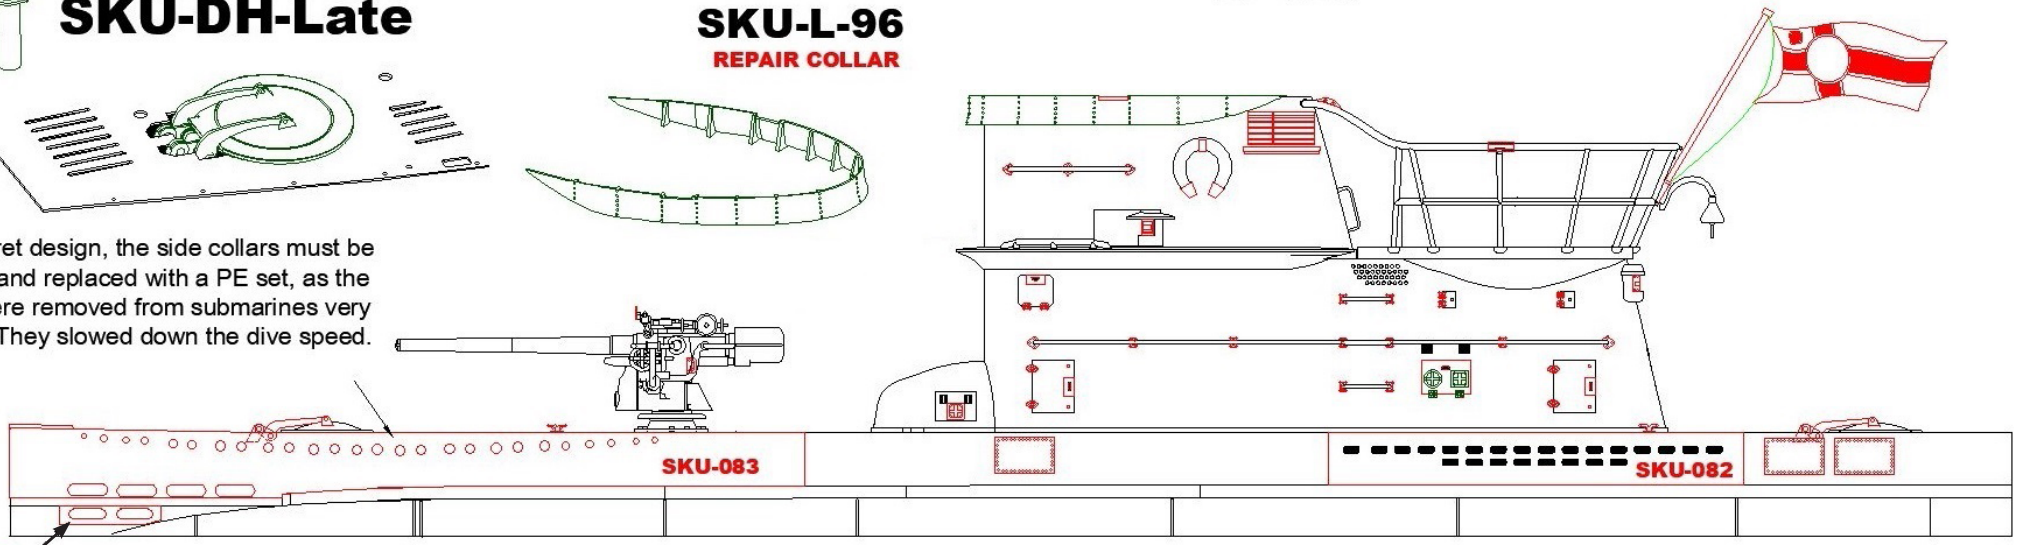

U-82

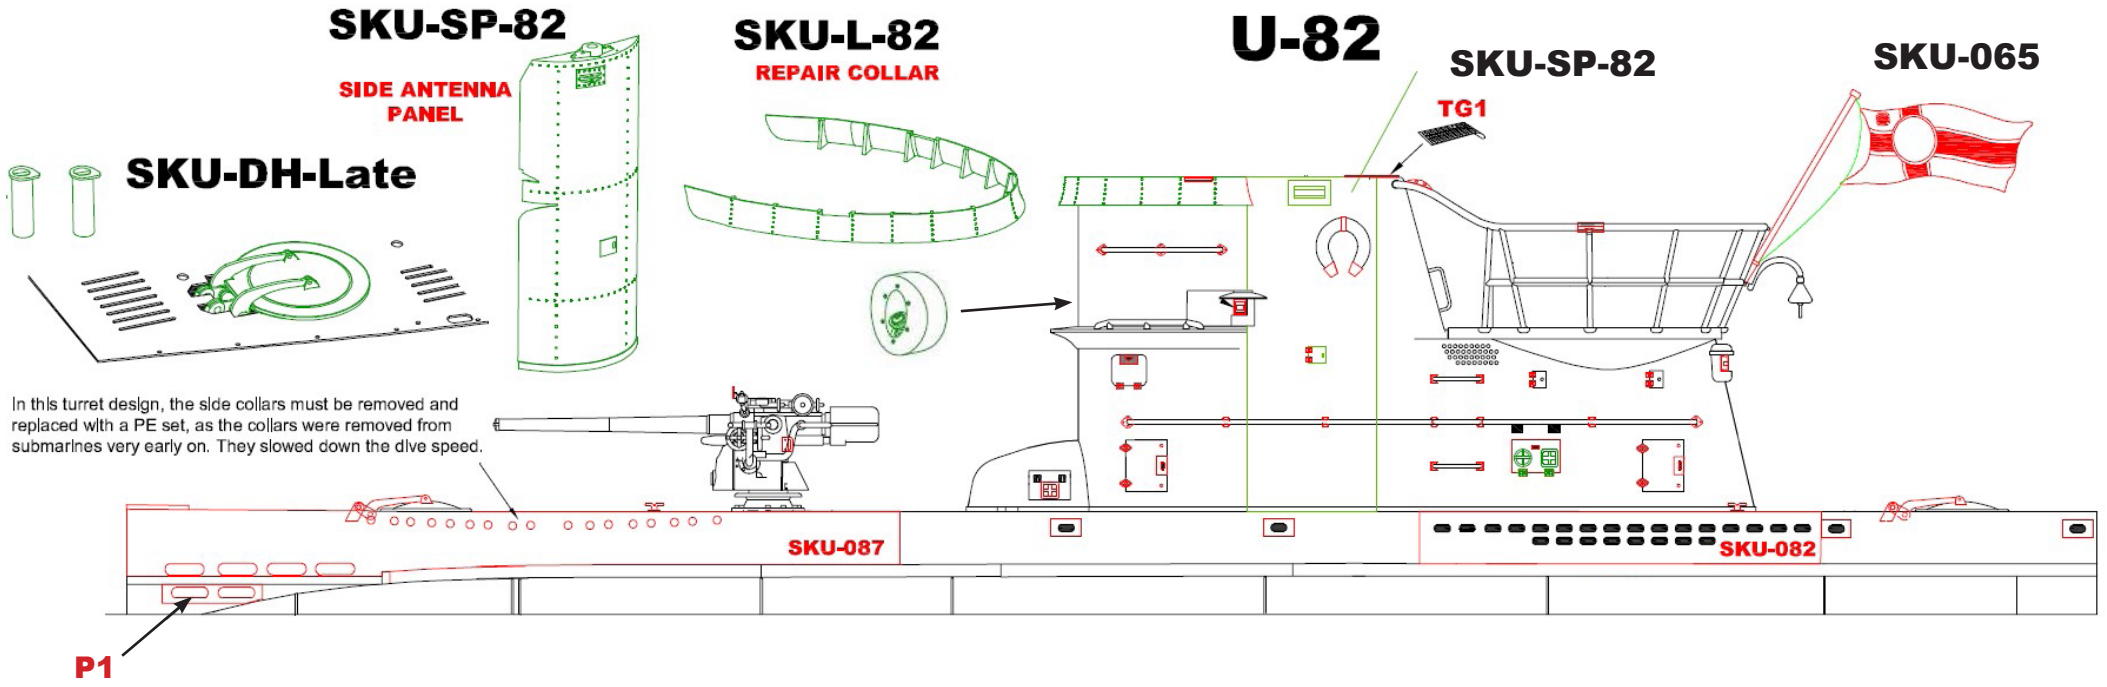
SKU-SP-82
SIDE ANTENNA PANEL
SKU-L-82
REPAIR COLLAR
SKU-SP-82
SKU-065
TG1
SKU-DH-Late
In this turret design, the side collars must be removed and replaced with a PE set, as the collars were removed from submarines very early on. They slowed down the dive speed.
SKU-087
SKU-082
P1

U-201

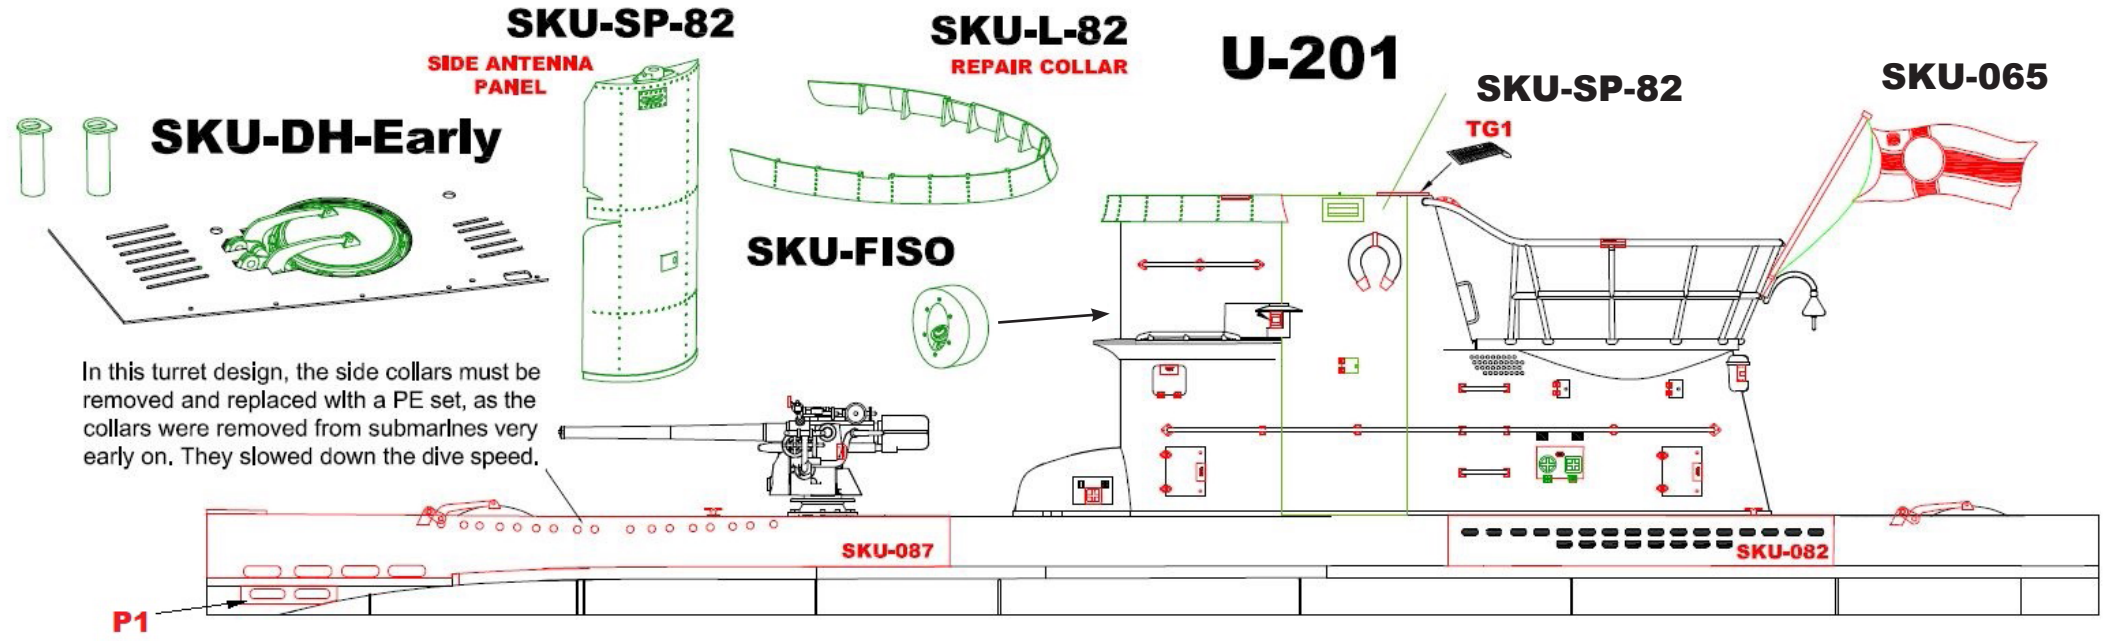
SKU-SP-82
SIDE ANTENNA PANEL
SKU-L-82
REPAIR COLLAR
SKU-SP-82
SKU-065
TG1
SKU-DH-Early
SKU-FISO
In this turret design, the side collars must be removed and replaced with a PE set, as the collars were removed from submarines very early on. They slowed down the dive speed.
SKU-087
SKU-082
P1

DECK

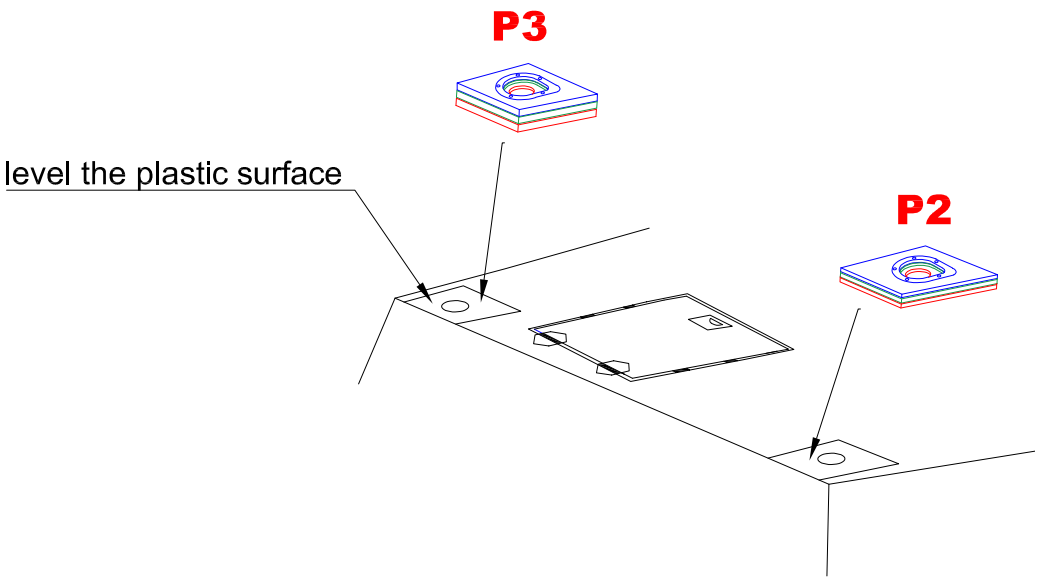

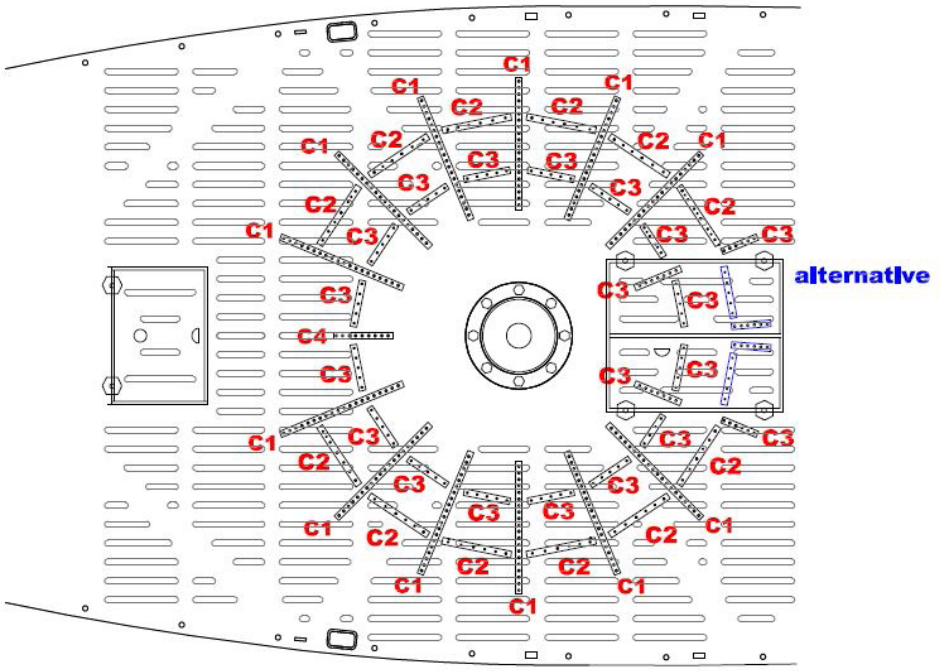

Border version
not correct

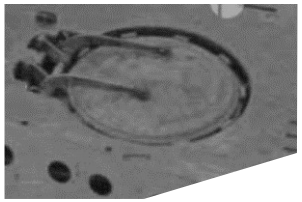

SKU-DH-Early

U-552
U-201

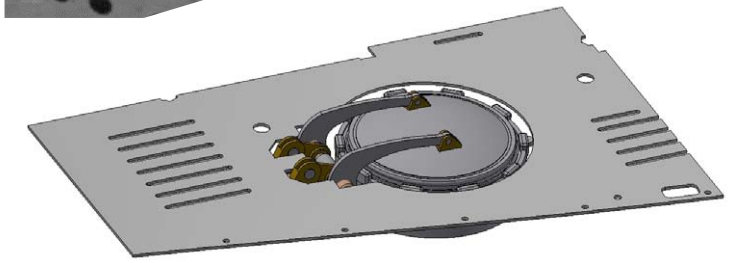

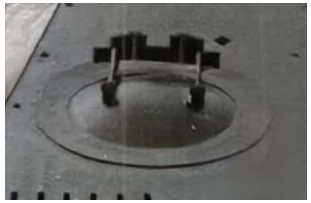

SKU-DH-Late
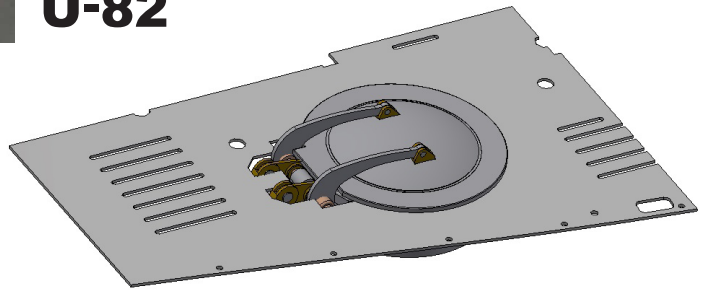
U-96
U-82